Workhorse W-Series - Power Steering Fluid - Filter Change

- (1) Remove the reservoir cap
- (2) Remove the large diameter hose from the base of the reservoir to drain f uid.
- (3) Place drain pan below reservoir.
- (4) Once f uid is drained, remove the clamp from the reservoir lid, and remove the lid.
- (5) Reach into the reservoir with your filter socket (or filter strap tool) and remove the old filter by turning it counter clockwise until it comes loose from the threads.
- 6 Install the new f Iter by hand by turning it clockwise to tighten it. Tighten it 1/2 turn after the seal makes contact with the reservoir.
- (7) Reinstall the hose onto the reservoir base.
- (8) Reinstall the reservoir lid and tighten the clamp.
- (9) Fill reservoir with power steering f uid.

